


# WOVEN WOOD SHADES

Corded, Continuous Cord Loop or Upended

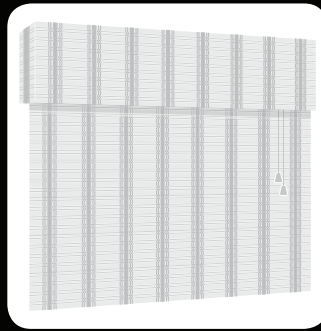

**3DAYBLINDS®**  
YOU'LL LOVE THE TREATMENT

## GETTING STARTED


A few simple tools are required:



Steel Tape Measure



Pencil

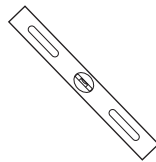

Level (for outside mount)



Power Drill and  
1/8" Drill Bit



Phillips Screwdriver



Awl (or tool for  
starting a screw hole)

Included are the screws needed for a normal installation. Depending on the mounting surface, fasteners other than the screws provided may be required. Wallboard and plaster require the use of anchors such as expansion toggle bolts. Bricks, tile and stone need special plugs and drill bits. Wood should always be pre-drilled to avoid splitting.


Professional installation is also available at most 3 Day Blinds locations.

### STANDARD HARDWARE




Mounting Bracket  
(for each 1 wing nut  
and 2 screws)

### CONTINUOUS CORD LOOP

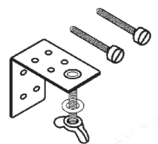

Mounting Bracket  
(for each 1 wing nut  
and 2 screws)

### UPENDED

 

3" Screw  
(quantity supplied  
varies, based on size)



Tension Pulley  
(2 screws and 1  
peg included)


## HARDWARE INFORMATION

The hardware you received with your product are REQUIRED for proper installation.

If brackets were supplied, they should be installed at each end between end cap and the flat part of the cord spool. Any additional brackets will need to be evenly spaced between the two end brackets.

NOTE: Do not mount brackets over the flat part of the cord spools, improper placement of the brackets can result in poor operation of the shade.


## INSIDE MOUNT

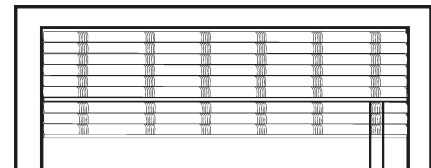


### INSIDE MOUNT HEADRAIL INSTALLATION

- Facing the window, position the bracket 1 1/8" in from the left corner of the window casing.
- Using a pencil, mark the wall through the holes in the top of the bracket.
- Using a drill with a 1/16" drill bit or an awl, make a small pilot hole at each pencil mark.
- Mount the bracket using the screws provided.
- Repeat this procedure for the right bracket, making sure the bracket is 1 1/8" in from the right corner of the window casing.
- Repeat this procedure for any remaining brackets. Make sure the brackets are evenly spaced throughout the opening.


# SIDE MOUNT

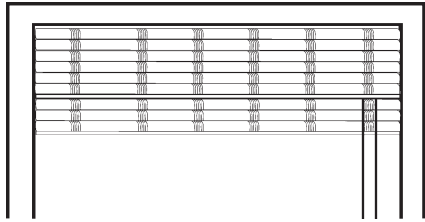


## SIDE MOUNT HEADRAIL INSTALLATION

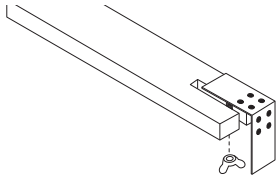


- Attach all mounting brackets to the headrail by placing the bolt on the mounting bracket through the slot in the top of the shade and loosely securing it with the wing nut.

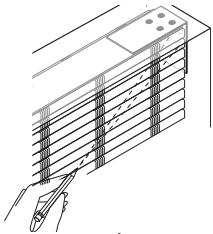


- Hold the shade up to the desired mounting position and mark the drill holes at the side of the bracket.

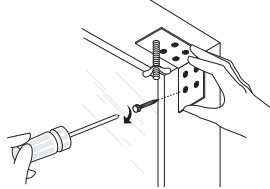

- Remove the brackets from the shade and secure them at the pencil marks using the screws provided. Drill a small pilot hole as required.

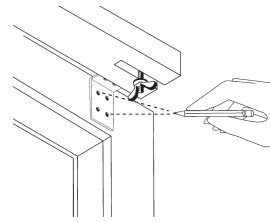


- Hold the shade up to the desired mounting position and mark the drill holes at the top of the bracket.

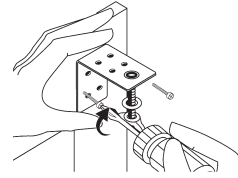


- Remove the brackets from the shade and secure them at the pencil marks using the screws provided. Drill small pilot hole as required.

# SHADE INSTALLATION


Place the shades into the mounting brackets and securely tighten the wing nut.

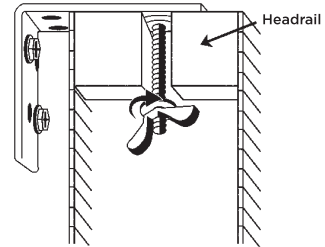


# OUTSIDE MOUNT

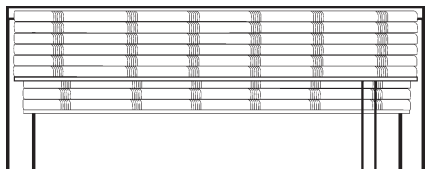

## OUTSIDE MOUNT HEADRAIL INSTALLATION

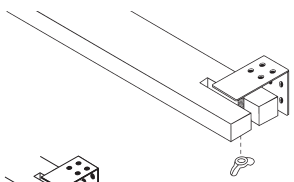

- Attach all mounting brackets to the headrail by placing the bolt on the mounting bracket through the slot in the top of the shade and loosely securing it with the wing nut.

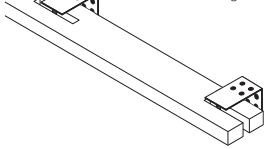

NOTE: Wide shades require center support brackets slots are pre-drilled in headrail.

# TENSIONER INSTALLATION

After installing the window covering, the Cord Tensioner must be mounted for the window covering to operate correctly. When properly installed, the Cord Tensioner functions as a safety device that makes the pull cord less accessible to children.

NOTE: If the mounting screws will not be secured into a wood stud, use wall anchors. For metal surfaces, pre-drill the holes and use sheet metal screws.

- For complete Tensioner Mounting Instructions, please refer to the instructions provided in parts bag.

## IMPORTANT!


- Install the Cord Tensioner in a location that minimizes accessibility to children and pets and where it will not interfere with its operation.
- Only supplied Cord Tensioners and hardware should be used.

## MOUNTING OPTIONS

### Option A - Inside mount without a bracket

Cord Tensioner used in an inside mount application without a mounting bracket.


- Locate the Cord Tensioner as close to the window as possible to minimize accessibility by children and pets. Be sure the Cord Tensioner is not placed in the path of the window covering when raising and lowering.

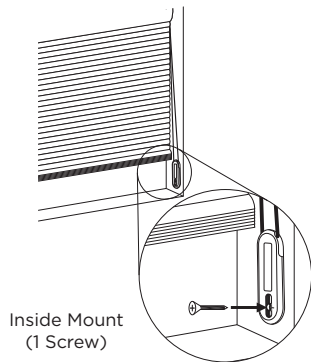

### Option B - Inside mount with a bracket

Cord Tensioner using the mounting bracket in an inside mount application.


- Locate the Cord Tensioner as close to the window as possible to minimize accessibility by children and pets. Be sure the Cord Tensioner is not placed in the path of the window covering when raising and lowering.

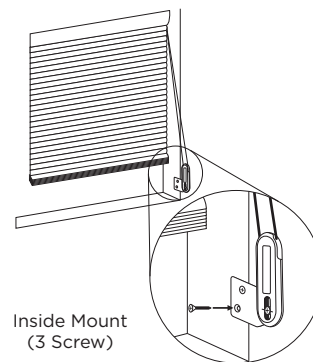

### Option C - Outside mount

Cord Tensioner using the mounting brackets in an outside mount application.

- Locate the Cord Tensioner as close to the window as possible to minimize accessibility by children and pets. Be sure the Cord Tensioner is not placed in the path of the window covering when raising and lowering.

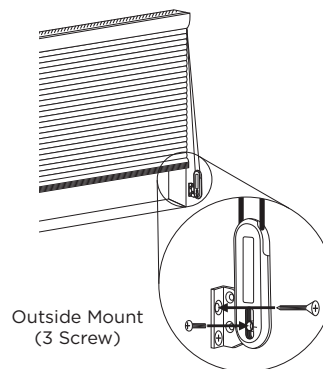


## FINAL INSPECTION

Ensure the cord can move freely through the Cord Tensioner without engaging the lock. The center of the screw hole should be at least half way down the slot, aligned with the indicator line on the Cord Tensioner.


CAUTION: Do not put the screw hole all the way to the bottom of the slot as this may cause the cord to become too tight and increase cord wear.

## SHADE OPERATION

### CONTINUOUS CORD CONTROL

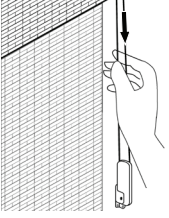


- To lower the shade, pull down on the cord. Continue to pull the cord down until the shade is at the desired height.

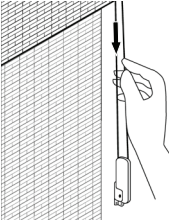


- Raise the shade by pulling the opposite side of the cord.

## SHADE REMOVAL

Hold shade securely and loosen and remove wing nut.

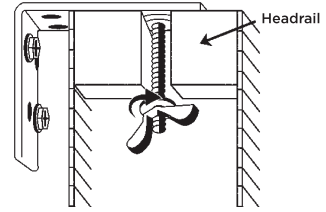

# ! WARNING ! ADVERTENCIA

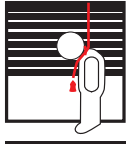

## Window Blind Cord Strangulation Risk

Window Blinds with a damaged or loose tension device or retractable cord that fails to fully retract pose a strangulation risk to children. To avoid this potential strangulation risk, consider purchasing cordless products or products with inaccessible cords.

## Riesgo de Estrangulamiento en Cuerdas de Persianas

Las persianas con un dispositivo tensor suelto o dañado o con una cuerda retractable que no se ajusta completamente representan un riesgo de estrangulación para los niños. Para evitar un posible riesgo de estrangulamiento, considere comprar productos inalámbricos o productos con cuerdas inaccessibles.

- Always keep cords and bead chains out of children's reach.
- Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.
- Attach tension device to wall or floor. This can prevent children from pulling cords and bead chains around their necks. Fasteners provided with the tension device may not be appropriate for all mounting surfaces. Use appropriate anchors for the mounting surface conditions.



**3 DAY BLINDS®**

YOU'LL LOVE THE TREATMENT  
800-800-3329 | 3dayblinds.com